



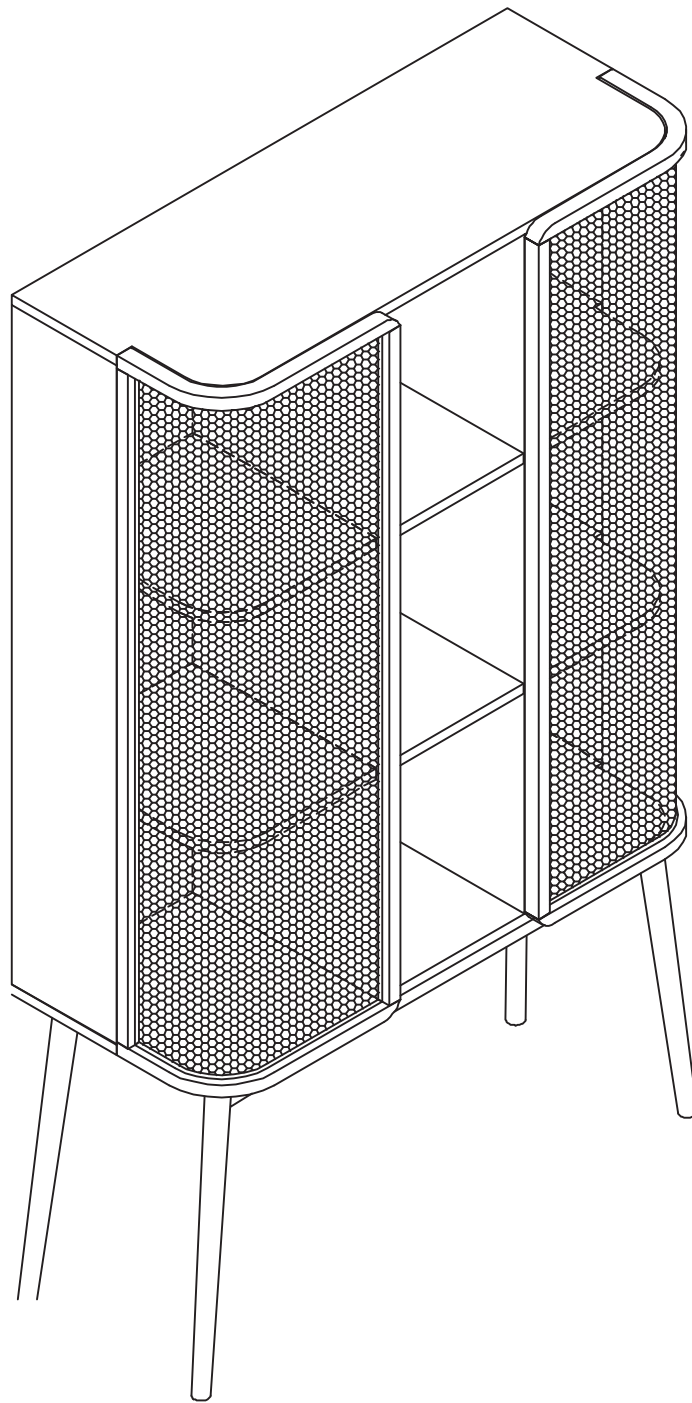





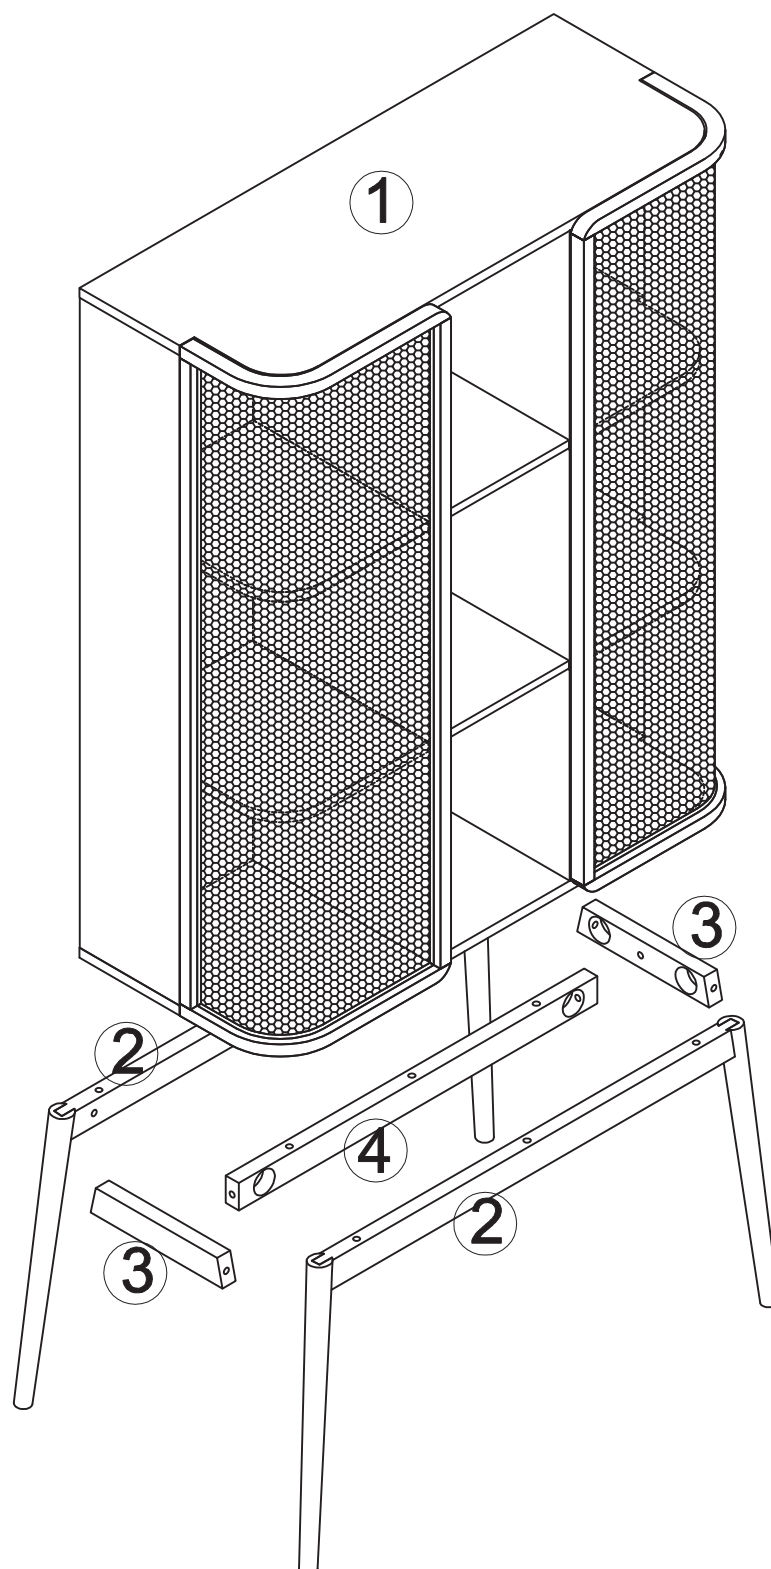





# Assembly instruction










<b>A</b>  <b>x9</b> M6*45mm	<b>B</b>  <b>x9</b>	<b>C</b>  <b>x9</b> Ø13mm	<b>D</b>  <b>x1</b>	<b>E</b>  <b>x6</b> M8*60mm
<b>F</b>  <b>x6</b>	<b>G</b>  <b>x6</b>	<b>H</b>  <b>x6</b> Ø17mm	<b>I</b>  <b>x1</b>	<b>J</b>  <b>x4</b>





## Step 1.

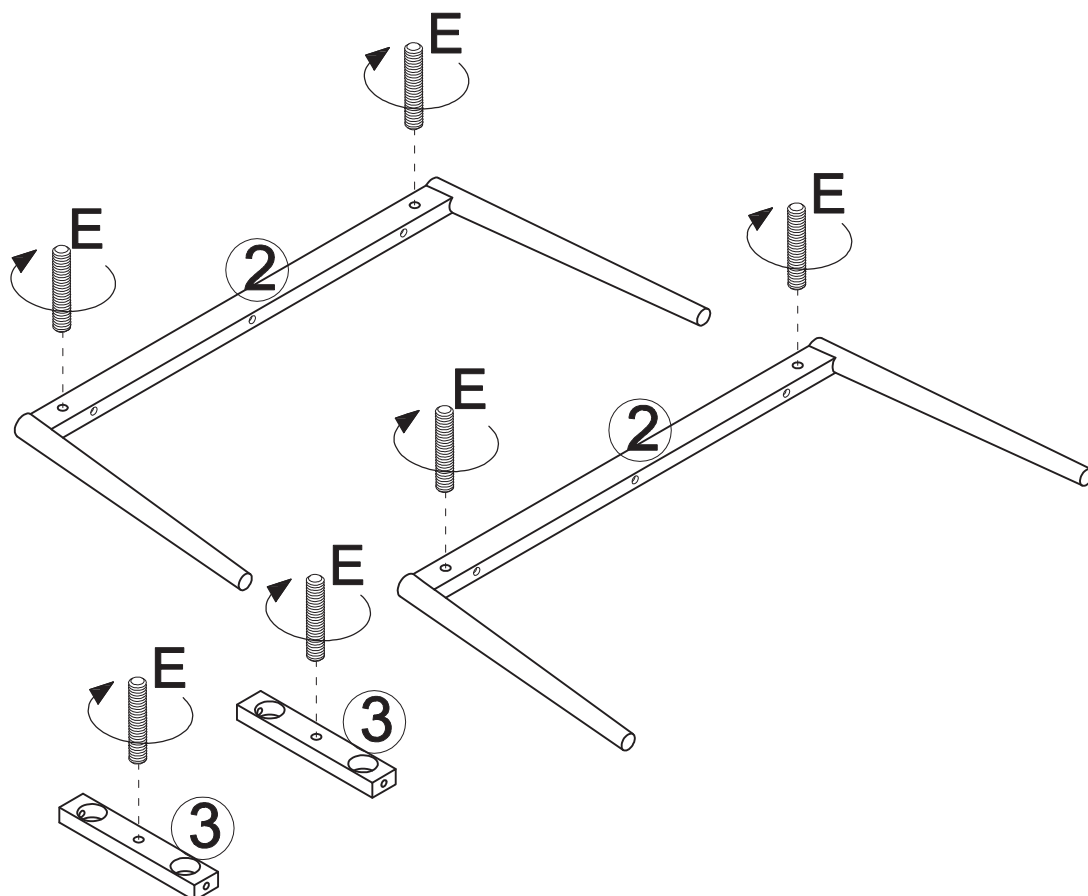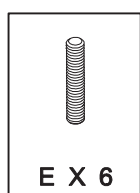








## Step 2.

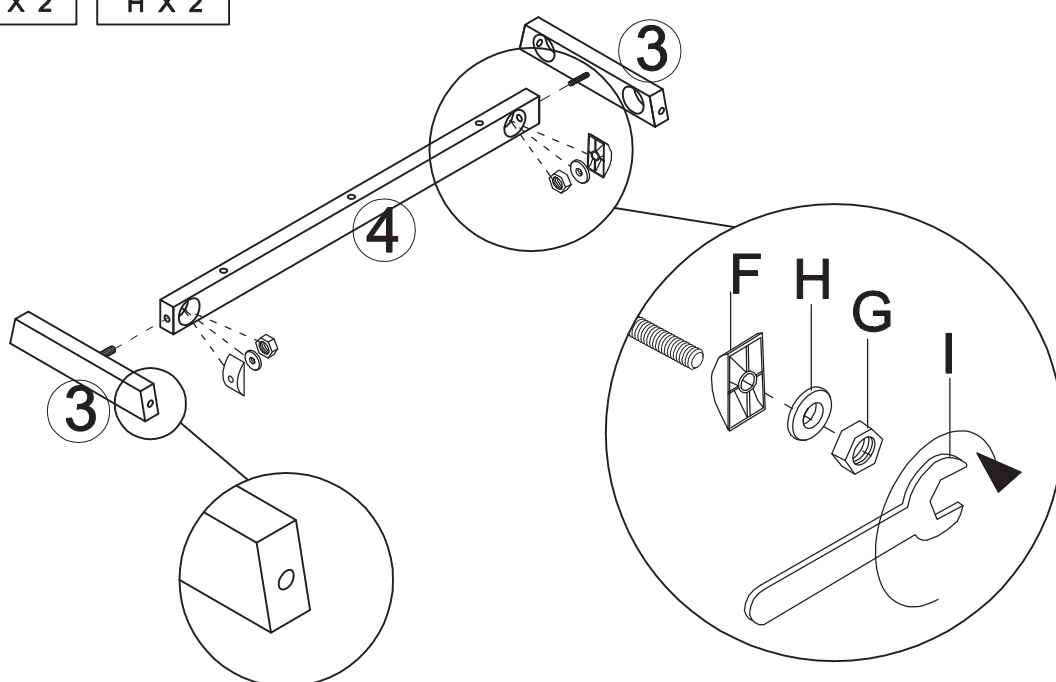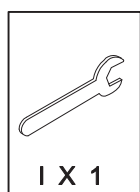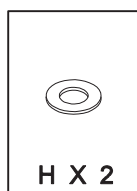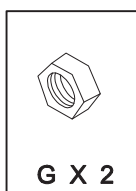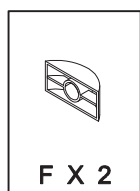

### Step 3.

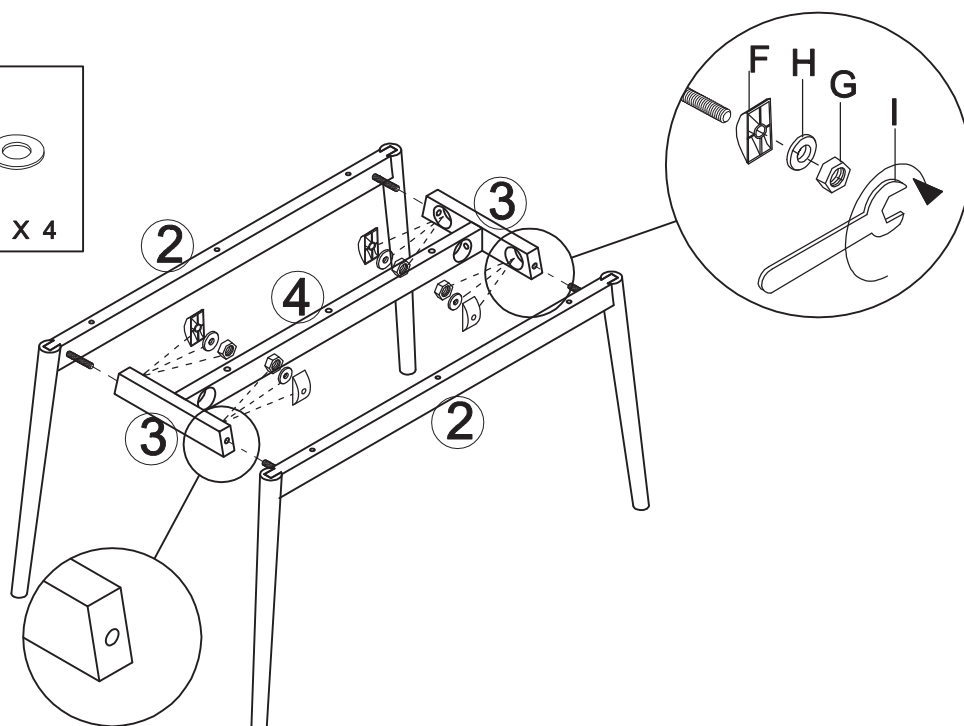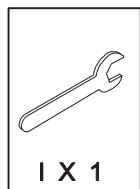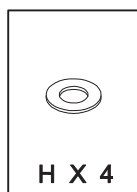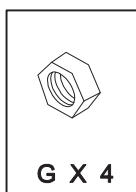

### Step 4.

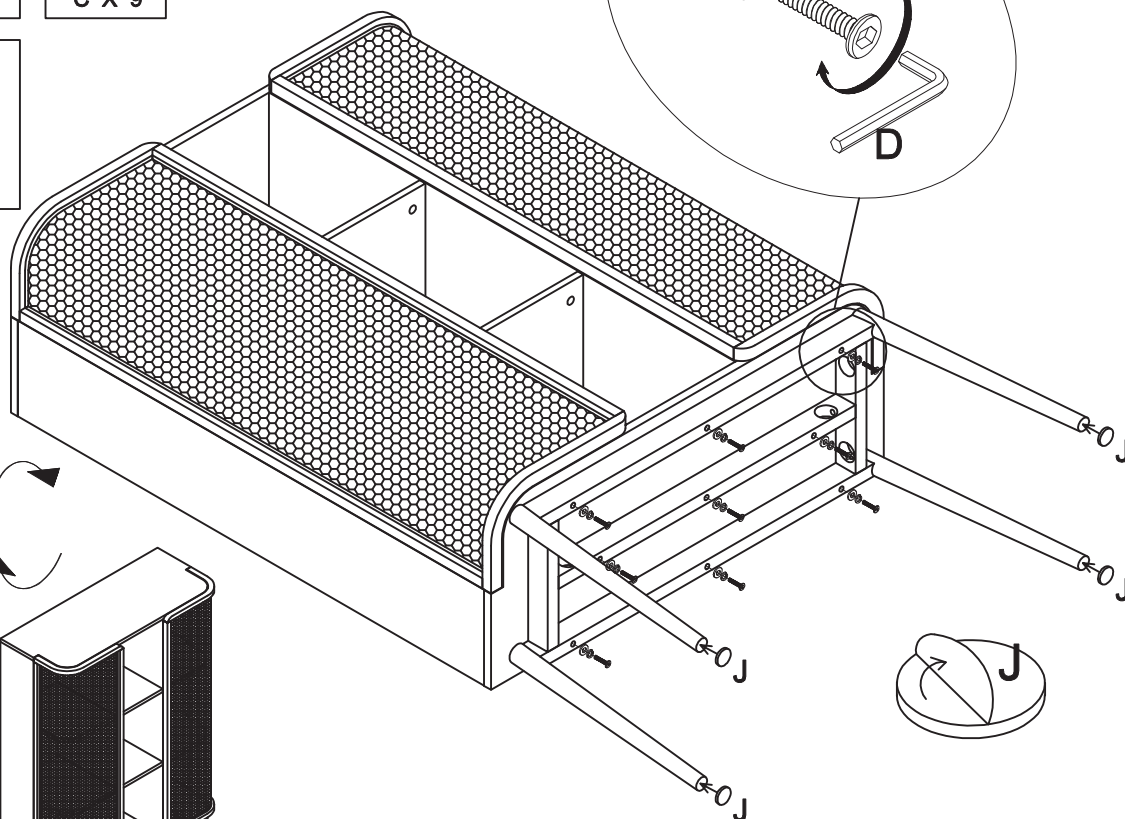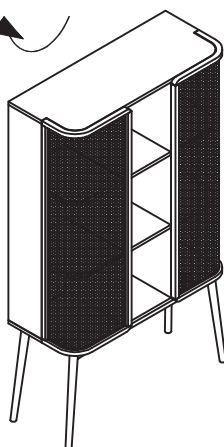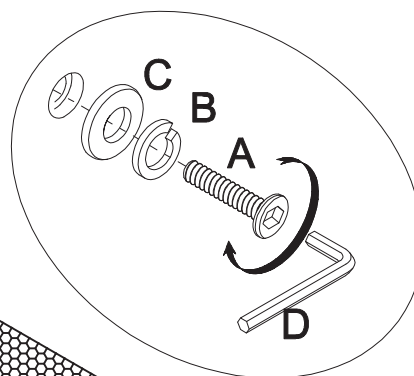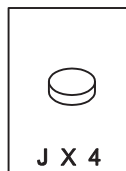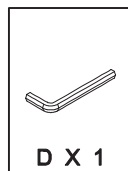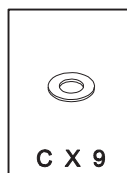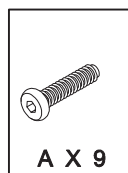

## Step 5.

