

Bergen 2 drawer bedside chest

Assembly Instructions Please keep for future reference

241/6757


226/4088

248/5881

571/3440

578/5344

hygena

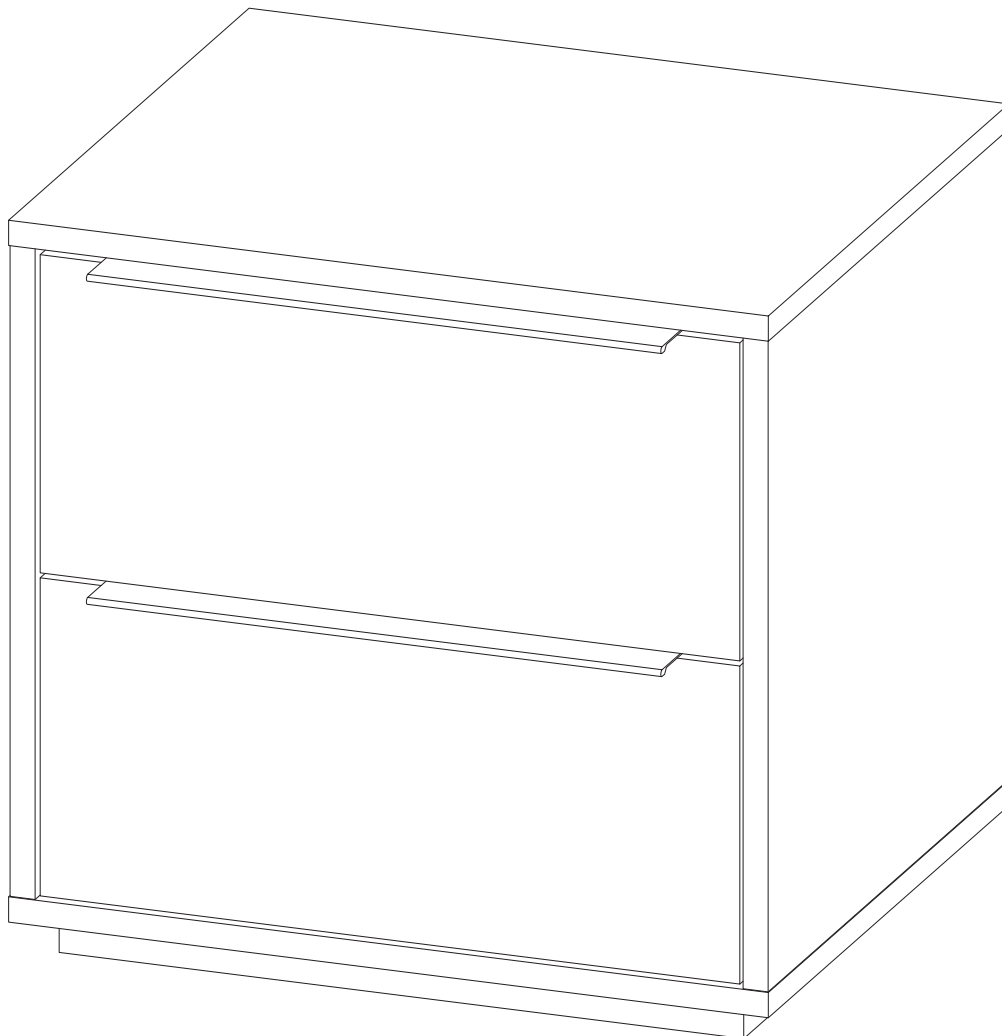

Dimensions

Width - 45.5cm

Depth - 38.1cm

Height - 43.9cm

578/5344 WHT/Mirror
571/3440 HG WHT
241/6757 OAK
226/4088 WHT
248/5881 WAL

Tip : To prevent damage, we recommend that you build your unit on the carton(s) it was packed in.

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit: www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: **0370 112 1928**

For any other queries please contact the Customer Helpline on: **0345 640 2020**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

- Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


- Regularly check and ensure that all bolts and fittings are tightened properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

For damaged or missing parts, please visit:
www.argos-support.co.uk or email: Help@ClickSpares.co.uk


Please check you have all the panels listed below

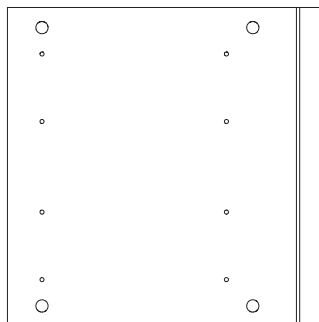


1 Left & Right Side x 2
 (38.7 x 38cm)
P2028

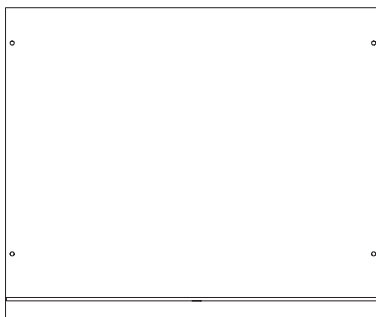


2 Top
 (45.5 x 38.1cm)
P1985

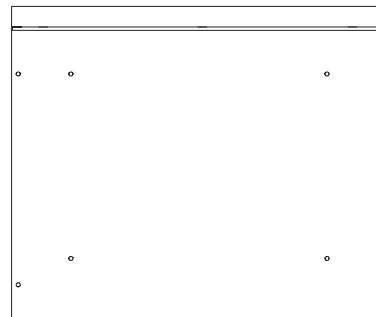

3 Bottom
 (45.5 x 38.1cm)
P1986



4 Foot
 (41x 34cm)
P1987

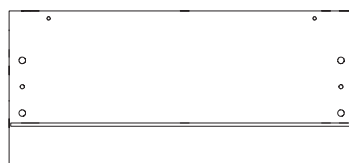

5 Drawerfront x 2
 (41.9 x 18.8cm)
**FA4233 / P4233 /
 Mirror:PS4233**




6 Left Drawer Side x 2
 (30.5 x 12cm)
LA163109



7 Drawer Back x 2
 (37.4 x 12cm)
LA162909



8 Right Drawer Side x 2
 (30.5 x 12cm)
LA163209



9 Foldy Back
 (43.5 x 39.8cm)
BO253809



10 Drawer Base x 2
 (38.6 x 29.9cm)
BO251209

















Components - Fittings

For damaged or missing parts, please visit:
www.argos-support.co.uk or email: Help@ClickSpares.co.uk


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


1/1

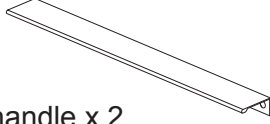A  <small>FK1012</small> Large locking nut x 8 (15x12mm)	B  <small>FK1011</small> Locking screw x 12 (5x24mm)	C  <small>FK1010</small> Small locking nut x 4 (12x10mm)
D  <small>FK1301</small> 10mm Fixing screw drawer x 8	E  <small>FK1309</small> 12,5mm Pozi screw x 34	F  <small>FK1322</small> 30mm Chipboard screw x 4
G  <small>FK1416</small> Felt selfadhesive x 6	H  <small>FA1510</small> Glue x 1	I  <small>FK1250</small> Drawerbase support x 16
J  <small>PM1516LA</small> Runner left part A x 2	K  <small>PM1516LB</small> Runner left part B x 2	L  <small>GR1978</small> Drawer handle x 2
M  <small>PM1516RA</small> Runner right part A x 2	N  <small>PM1516RB</small> Runner right part B x 2	

Tools required

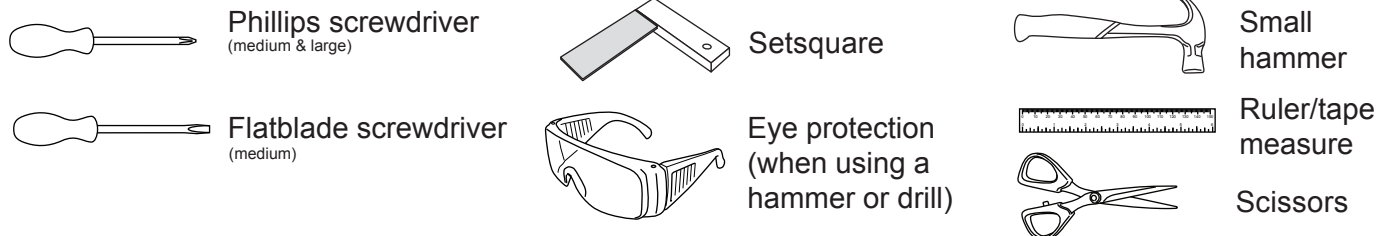

Ruler - Use this ruler to help correctly identify the screws

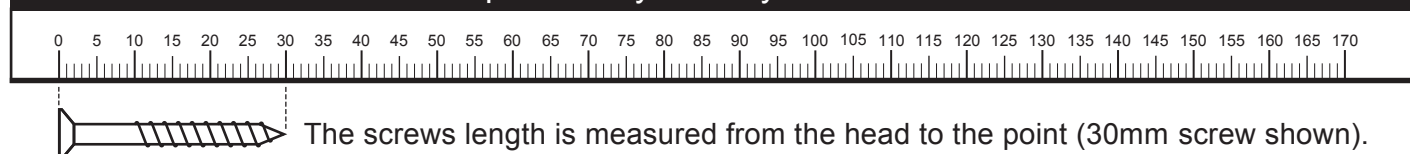

Assembly Instructions


Step 1

a: Prepare the drawer fronts

Screw 2 locking screw **B** into the holes shown on the back of each drawer front **5**.

Note: Insert locking screw **B** as far as shown. **Do not over tighten.**

a:

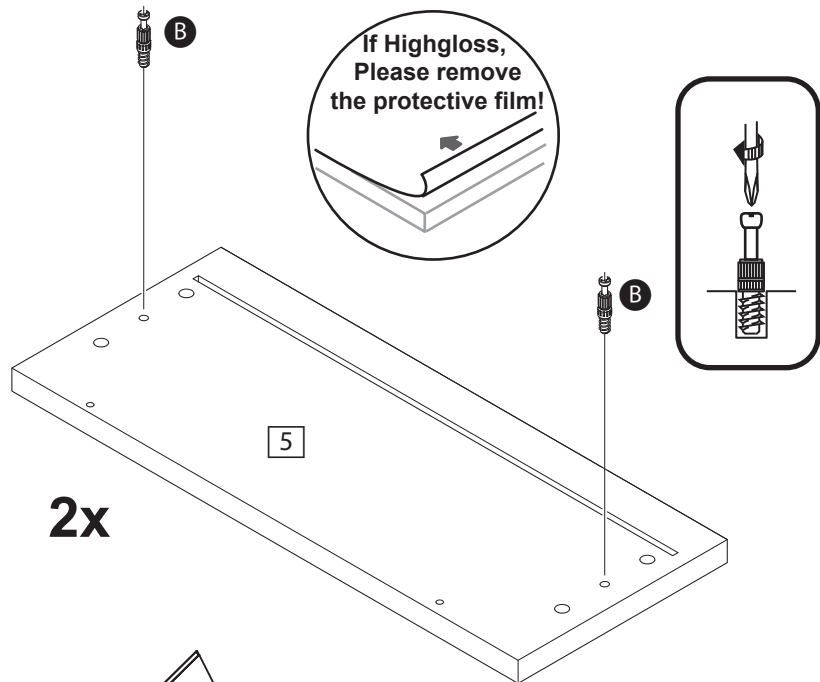


b: Prepare the drawer sides

Insert a small locking nut **C** into the hole on left drawer side **6** and right drawerside **8**. Make sure the 'arrow' on **C** is pointing towards the hole in the edge of **6** and **8**.

Put drop of glue **J** in the 6 holes of drawersides **6** and **8** before sliding them onto the dowels of drawerback **7**.


Slide drawerbase **10** in the grooves of the drawer-unit.

b:

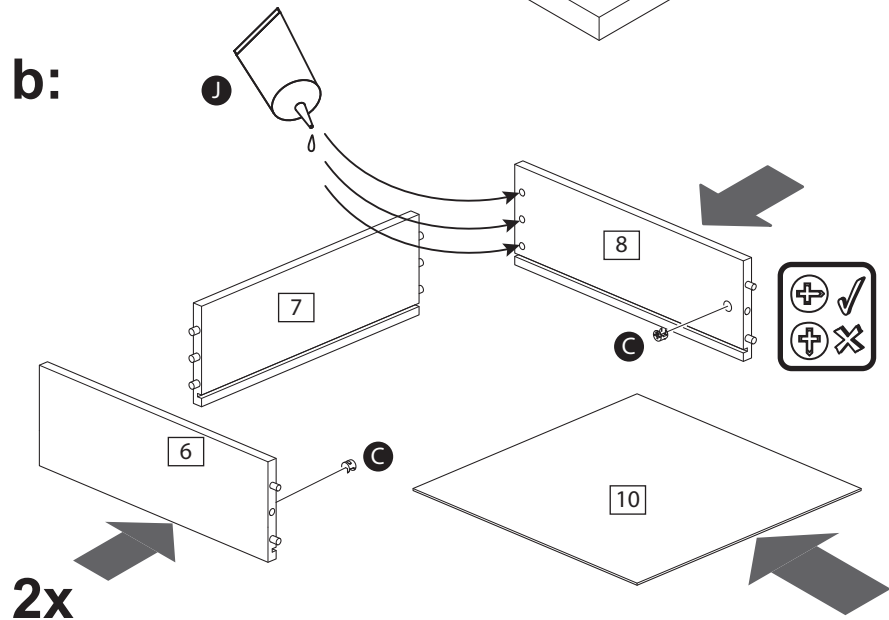

c: Turn the drawer wrap assembly over and push onto the drawer front **5**. Use a phillips or flatblade screwdriver, that is a good fit, to turn 24mm locking nut **C** as far as it will go - more than 1/2 turn.

c:

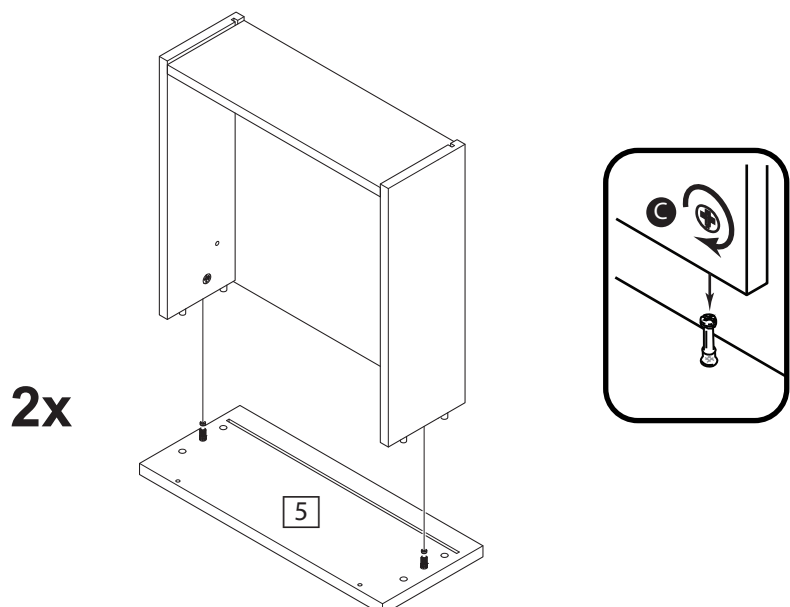


Assembly Instructions

Step 1 continued

finishing the drawers

d: Turn over drawer and slide drawerbase supports **I** in corner as shown and fix them, using the attached screws.

d:


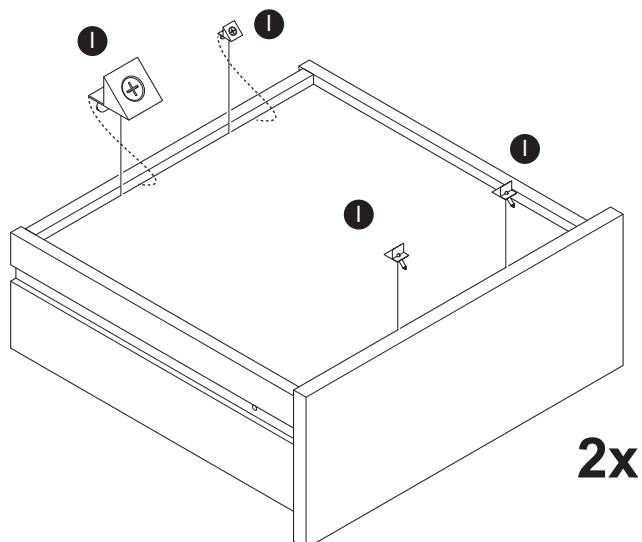


Step 2

Attaching runners


a: Fix runner left and right side **A** **J** and **M** on left & right side **1** as shown using 10mm fixing screw drawer **D** and 12,5mm pozi screw **E**.

a:

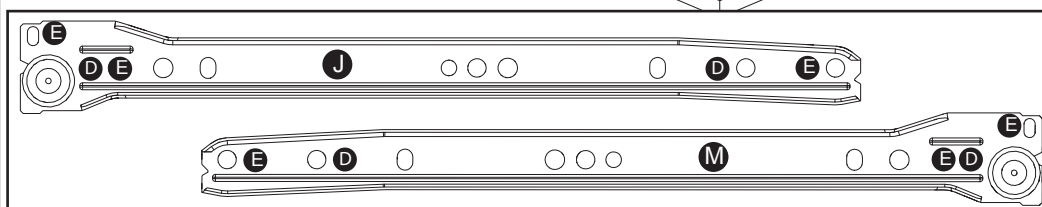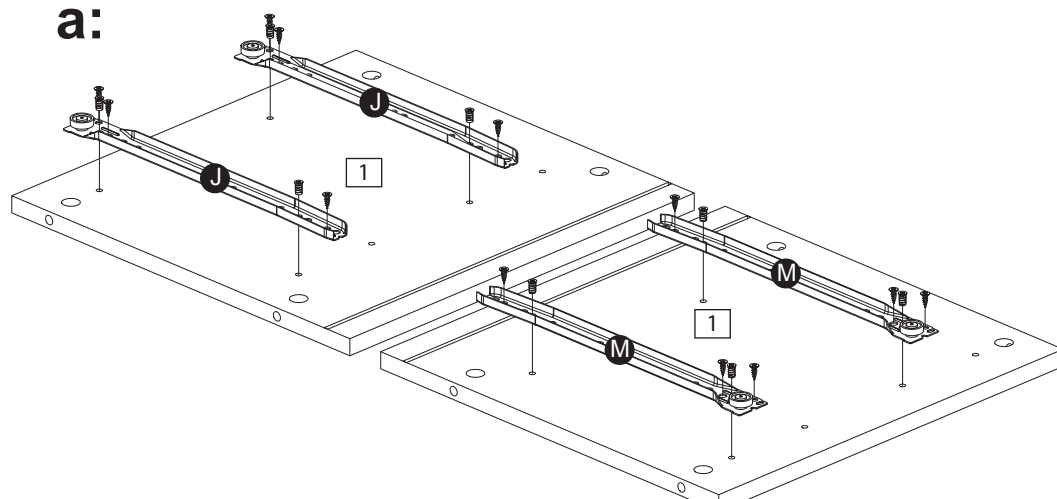

b: Insert 8 Large locking nuts **A** into left & right side **1** where shown. Make sure the 'arrow' on **A** is pointing towards the hole in the edge of **1**.

b:

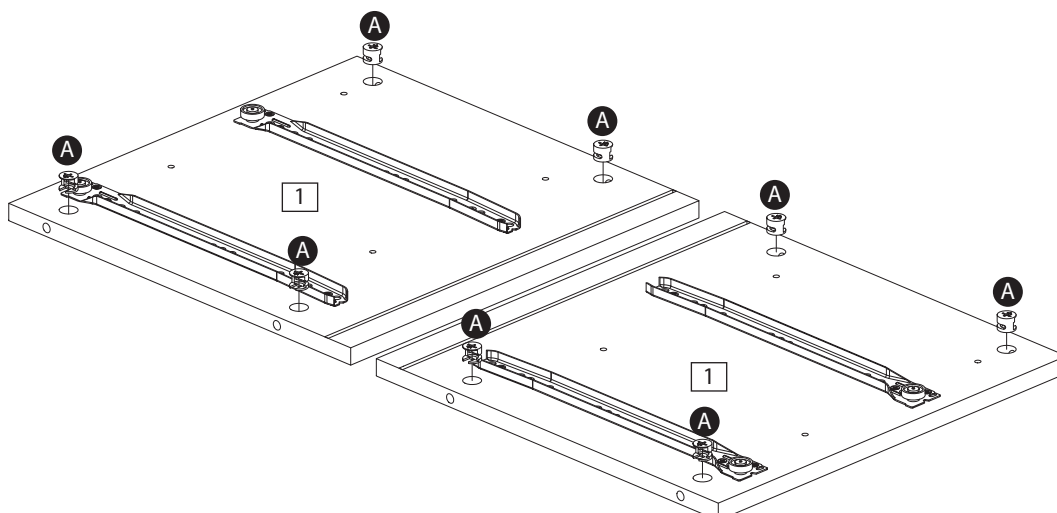

Assembly Instructions

Step 3


Attach bottom and foot

Position bottom **3** onto foot **4** and fix with 30mm chipboard screw **F**.

Screw 24mm locking screws **B** into bottom **3**.

Note: Insert locking screw **B** as far as shown.

Do not over tighten.

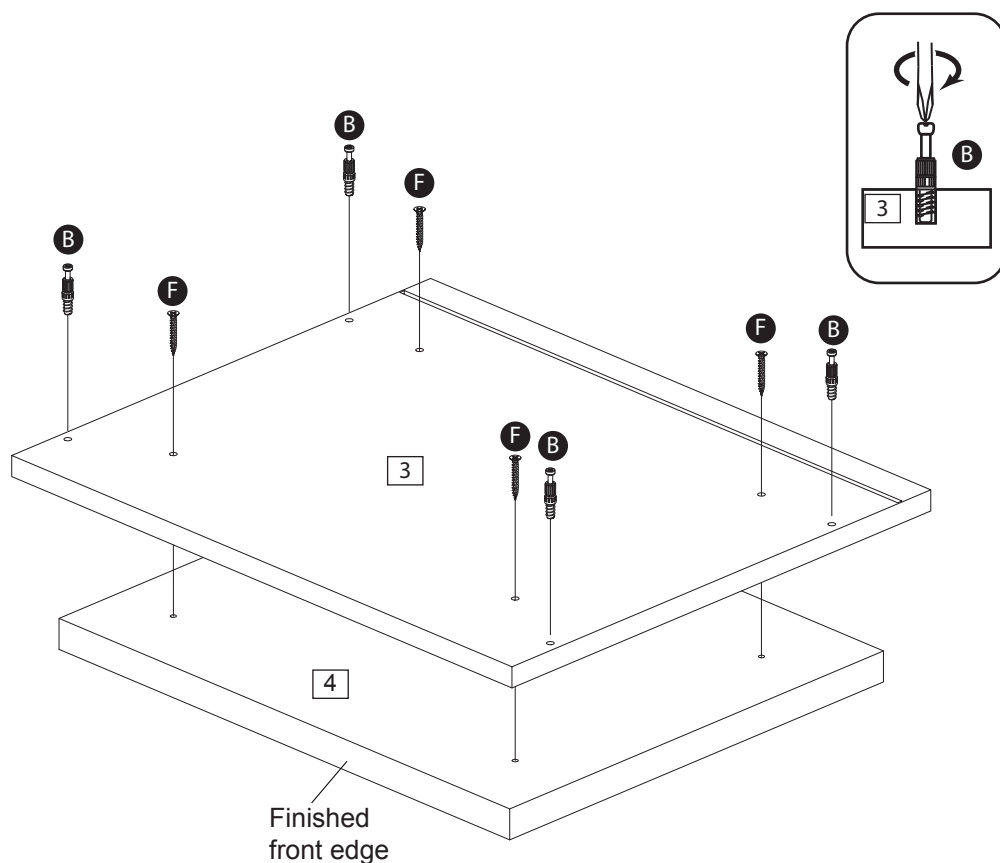


Step 4

Attaching left & right side

Position left & right side **1** onto bottom **3**.

Use a screwdriver to turn locking nuts **A** clockwise to lock.

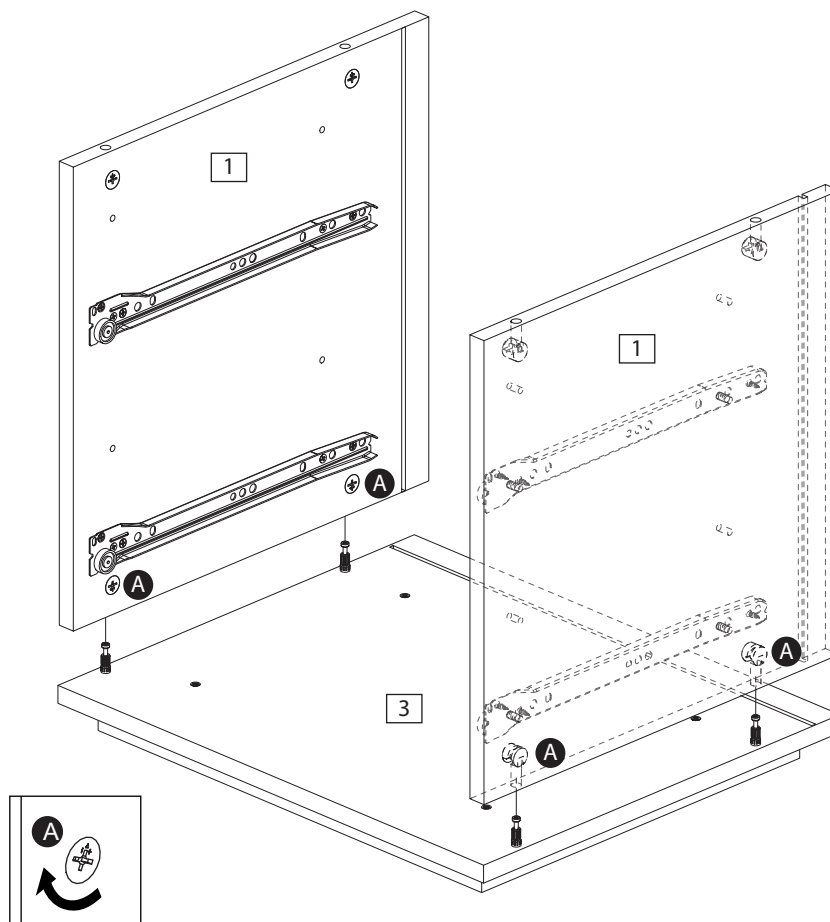


Assembly Instructions

Step 5

Slide in foldy back

Slide foldy back **9** into the grooves in left & right side **1**.

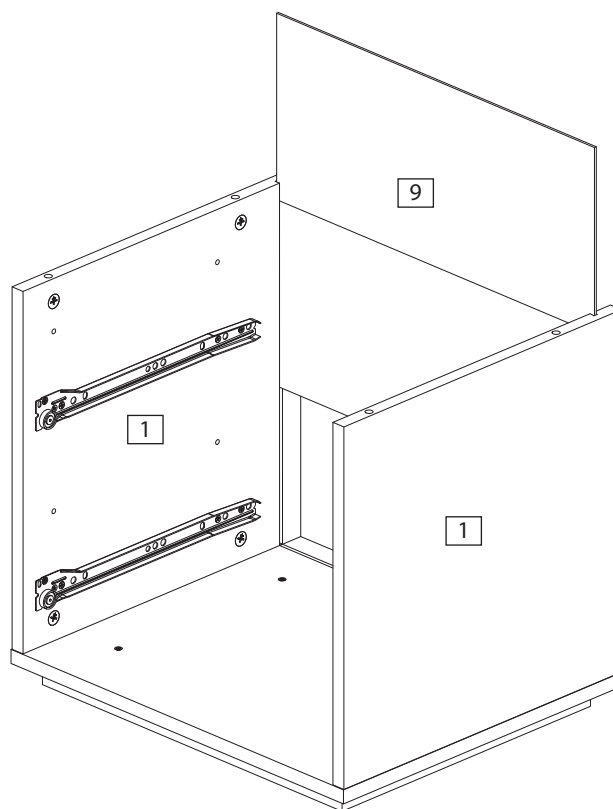


Step 6

a: Prepare top

Screw 4 locking screw **B** into the holes shown on top **2**.

Note: Insert locking screw **B** as far as shown.

Do not over tighten.

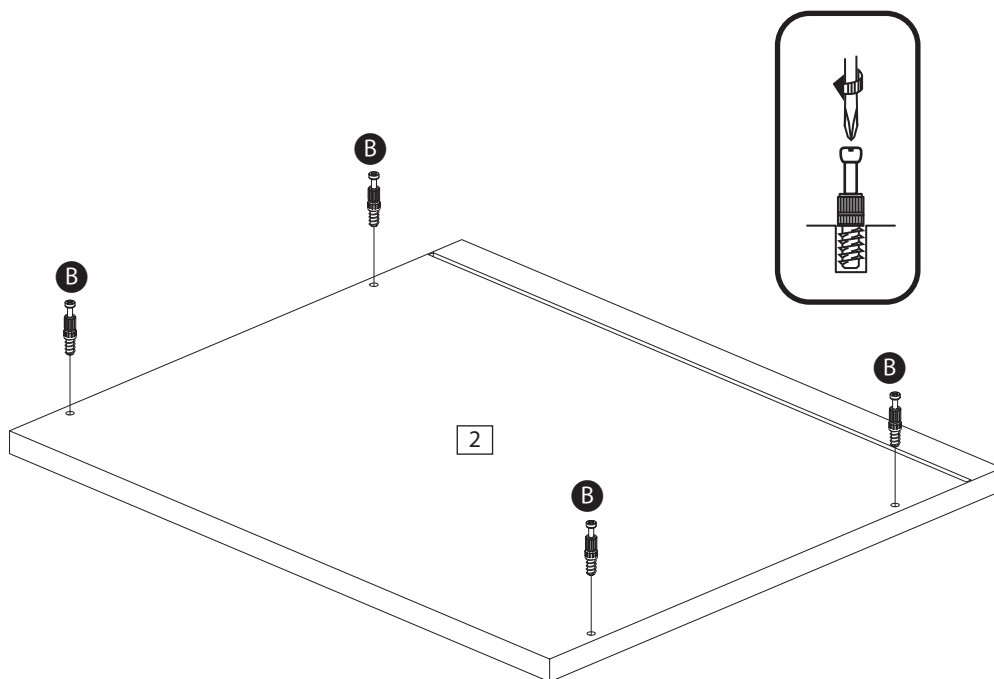


Assembly Instructions

Step 6 continued

b: Attaching top

Position top **2** onto left & right side **1**.

Use a screwdriver to turn locking nuts **A** clockwise to lock.

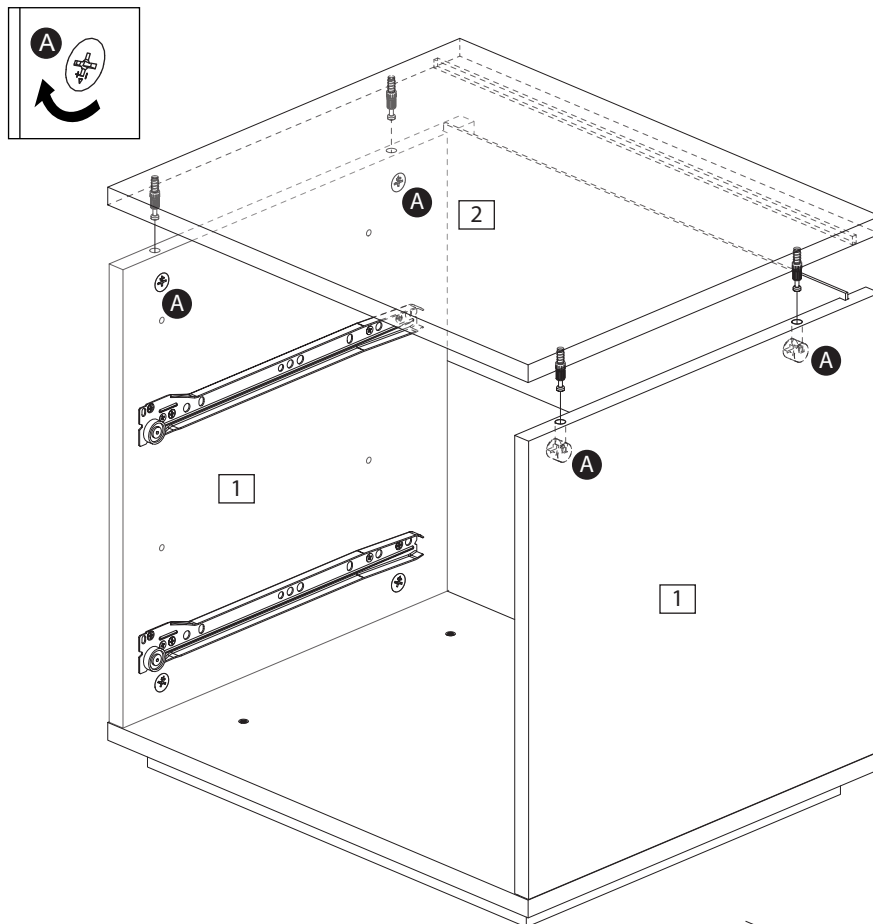


Step 7

Fixate foldy back

Turn over chest and slide drawerbase supports **I** in corner as shown and fix them, using the attached screws.

Stick the selfadhesive felt **G** strategically underneath the foot **4**.

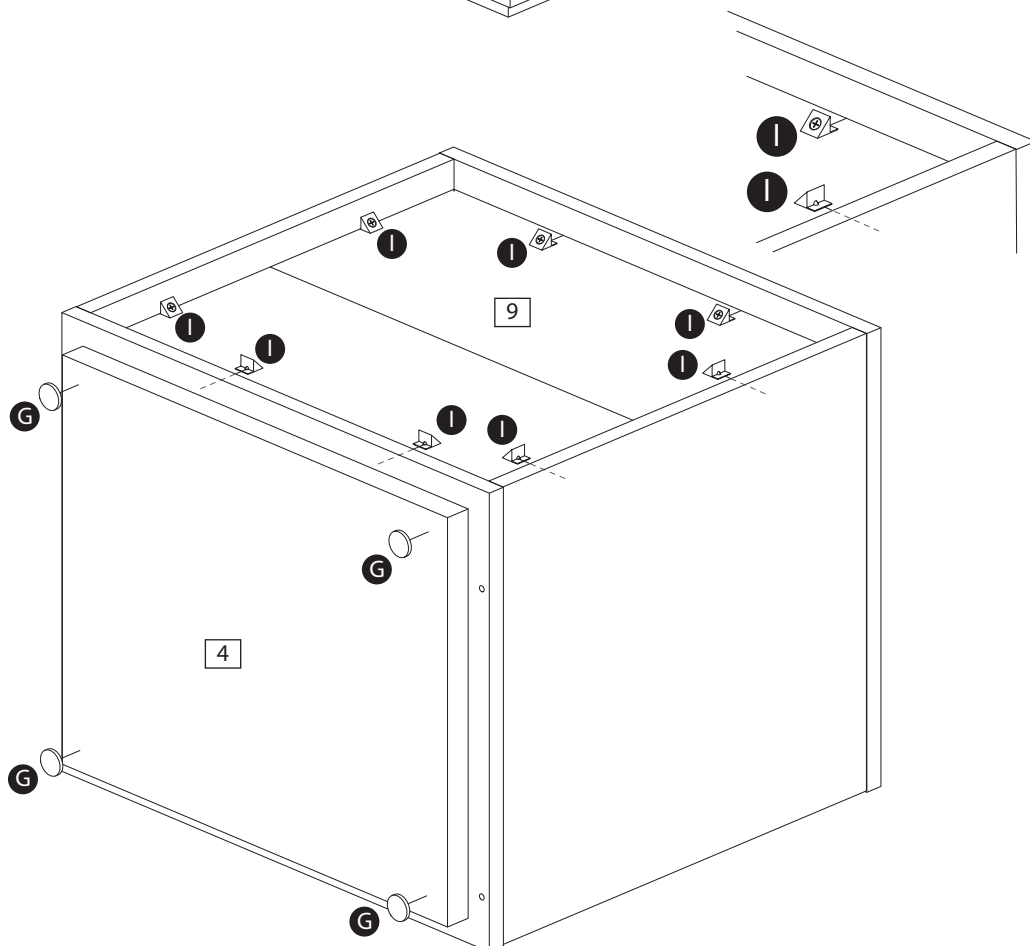


Important:
Chest **MUST**
be 'square'
when back is
attached.

Assembly Instructions

Step 8

Attaching runners


Fix runner left and right side B **K** and **N** on left & right drawer side **6** and **8** as shown using 12,5mm pozi screw **E**.

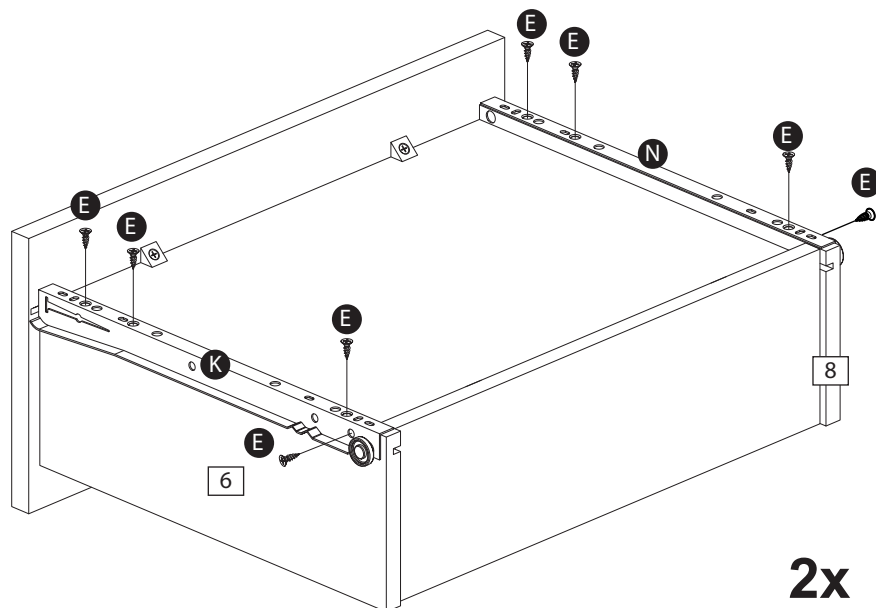

Step 9

Attaching drawer handle

Attach drawer handle **L** on drawer front **5** as shown using 12,5mm pozi screw **E**.

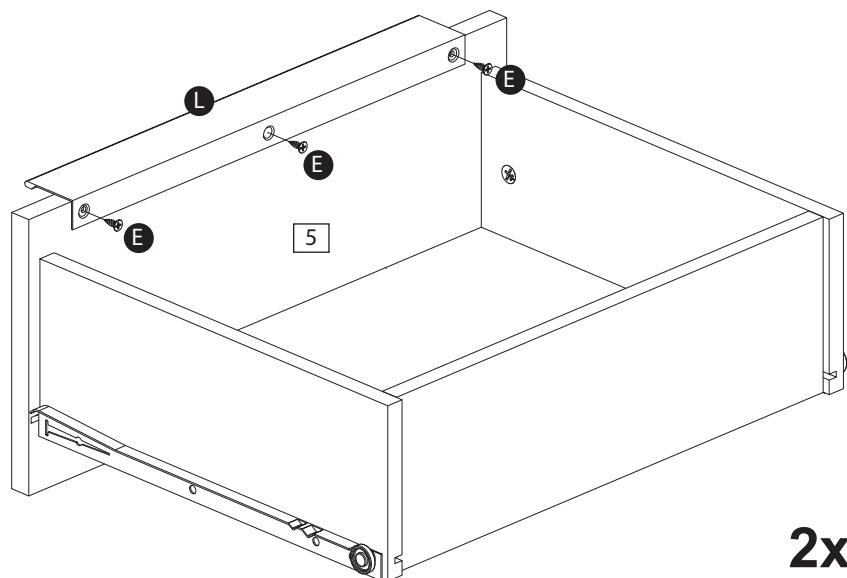

Step 10

Inserting drawers

